



# Programming Procedure

The Moxi® remote is pre-programmed to control your Moxi HD DVR or Moxi Mate.

You can also choose to program your remote to control the volume, mute, and power functions of your TV or audio device.

There are two ways to program your TV or audio device: by code or by search. To program by code, you need to find the code for your particular TV in the tables listed in this document. If none of the codes work or there aren't any listed for your TV, you can program by search.

## Programming the TV by Code

1. Turn on your TV.
2. In front of your TV, press and hold the MOXI and OK buttons on your remote together until the red LED at the top of the remote blinks 2-times. Release both buttons after the red LED blinks as indicated.
3. Using the numeric buttons on the remote, slowly enter the 1st setup code listed for your TV brand.
  - a. If that code is valid, the red LED will blink two times. Proceed to step 4 to test your remote.
  - b. If that code is invalid, the red LED will blink once slowly. Return to step 2, and continue with the next code listed for your TV brand. If you have entered all of the codes listed for your TV brand without finding a code that operates Power, Vol+/- and Mute, refer to the Programming by Search section below.
4. Test your remote by pressing the POWER button several times.
5. If your TV turns on and off, try pressing the Vol +/- and Mute buttons. If all of these buttons operate your TV, you have programmed the correct code. If any one of the buttons do not work, return to step 2, and try the next code listed for your TV brand. If you have *continue...*

tried all of the relevant codes and the buttons still do not function, refer to the Programming by Search section below. If the buttons are functioning properly, proceed to Section 3 to program your Audio device.

## Programming the Audio Device by Code

1. Turn on your TV.
2. Repeat steps 2-5 in the "Programming Your TV by Code" section above, but use the setup codes listed for your Audio brand

## Programming by Search

If your TV or Audio devices are not listed in the setup code tables, or your remote does not respond to the listed codes, you can try programming the remote by "Searching" for the correct TV and audio codes. Using this method, the order you program your devices (TV first, then audio or audio first, then TV) is not important as long as you follow these steps:

1. Turn on your TV and audio devices.
2. In front of your TV and audio devices, press and hold the MOXI and OK buttons on your remote together until the red LED at the top of the remote blinks 2-times. Release both buttons after the red LED blinks as indicated.
3. Slowly press the Ch + button repeatedly, which will cycle through potential remote codes. Continue pressing it until you find a code that turns off your TV or audio device off.

As soon as your TV or audio device turns off, stop pressing the Ch + button.

4. Press Mute. If your TV or audio device:
  - a. Turns back on, press OK to lock in the code. The red LED at the top of the remote will blink 2-times.
  - b. Does not turn back on, you may have gone past the correct code. Press the *continue...*

- b. ch - button one step at a time until you find a code that turns your TV or audio device back on. Once you have found a code that turns your TV or audio device on and off, press OK to lock in the code. The red LED at the top of the remote blinks 2-times.
5. Repeat steps 2 – 5 above to program your second electronic device, TV or audio.

## Replacing batteries

When replacing AA batteries, use only high-quality, non-corrosive batteries designed for use in electronic equipment.

## Resetting to factory default

Press the MOXI and OK buttons simultaneously, hold until the LED light blinks twice, and then press CLEAR, CLEAR, CLEAR.

## Older devices

Some older TVs may not be supported. If the TV still fails to respond, use its original remote to control it.

## To disable the backlight on the remote

1. Press and hold the MOXI and OK buttons simultaneously on the Moxi remote until the LED at the top of the remote blinks twice.
2. Press the STOP button. If successful, the LED at the top of the remote will blink twice.

## To enable the backlight on the remote

1. Press and hold the MOXI and OK buttons simultaneously on the Moxi remote, until the LED at the top of the remote blinks twice.
2. Press the REC button. If successful, the LED at the top of the remote will blink twice.

## Moxi Remote Tips

- \* locks/unlocks items in SuperTicker™, brings up virtual mouse in MoxiNet pages
- ticker** displays and hides SuperTicker™
- power** turns the TV and other audio device on and off
- moxi** jumps to Recorded TV list, pressing twice brings up Grid Guide
- live TV** jumps to full-screen live TV

- play** starts a recorded program, photo slideshow, or music track
- rew** multi-speed rewind for playback (press multiple times to select the speed)
- fwd** multi-speed fast forward for playback (press multiple times to select the speed)
- rec** records the currently-playing show or the show in center focus
- stop** exits out of a recorded show or stops a recording in progress if you're watching full screen
- pause** pauses a live or recorded show, photo slideshow, or music track
- replay** rewinds the program seven seconds
- skip** jumps ahead in stored or recorded video (30 second default), moves the Moxi Menu forward one day

- number** tune directly to channels, enter text in menus, make choices in games
- 1** once to backspace during text entry
- 0** once to add a space during text entry
- clear** deletes items (recorded shows) from menus and clears menu elements from full screen view
- enter** executes numeric or text entries



- info** displays additional information about the selected item
- zoom** toggles between an open Moxi Menu and full-screen TV without losing menu position
- arrow** navigates menus (hold for turbo speed) and plays games. Left arrow exits most menus
- OK** selects or activates the chosen item
- back** jumps back 15 minutes, shows previous note page, jumps 30 minutes in the Moxi Menu, goes to the previous photo
- next** jumps forward 15 minutes, shows next note page, jumps 30 minutes in the Moxi Menu, goes to the next photo
- MOXI** returns, one step at a time, back to the Channels category of the Moxi Menu

- vol** when programmed, adjusts the audio volume on the TV or connected audio device
- mute** toggles sound on and off
- jump** goes to the last viewed channel, can be used to tune to analog channels
- ch** changes channels or pages through vertical menus (hold for turbo speed)

MOXI® REMOTE  
BACKLIT



Remote Control  
Programming and Use  
Instructions

The list of supported remote control codes are frequently updated as new electronic devices become available. For the latest list of codes, please visit <http://www.moxi.com/support>